

ACU-RITE® 200S


Step-by-Step Instructions for Changing the Count Direction

ACU-RITE® 200S: *Changing Count Direction*




Start with the unit off.
Or turn it off and wait 10 seconds before turning it back on.

ACU-RITE® 200S: *Changing Count Direction*

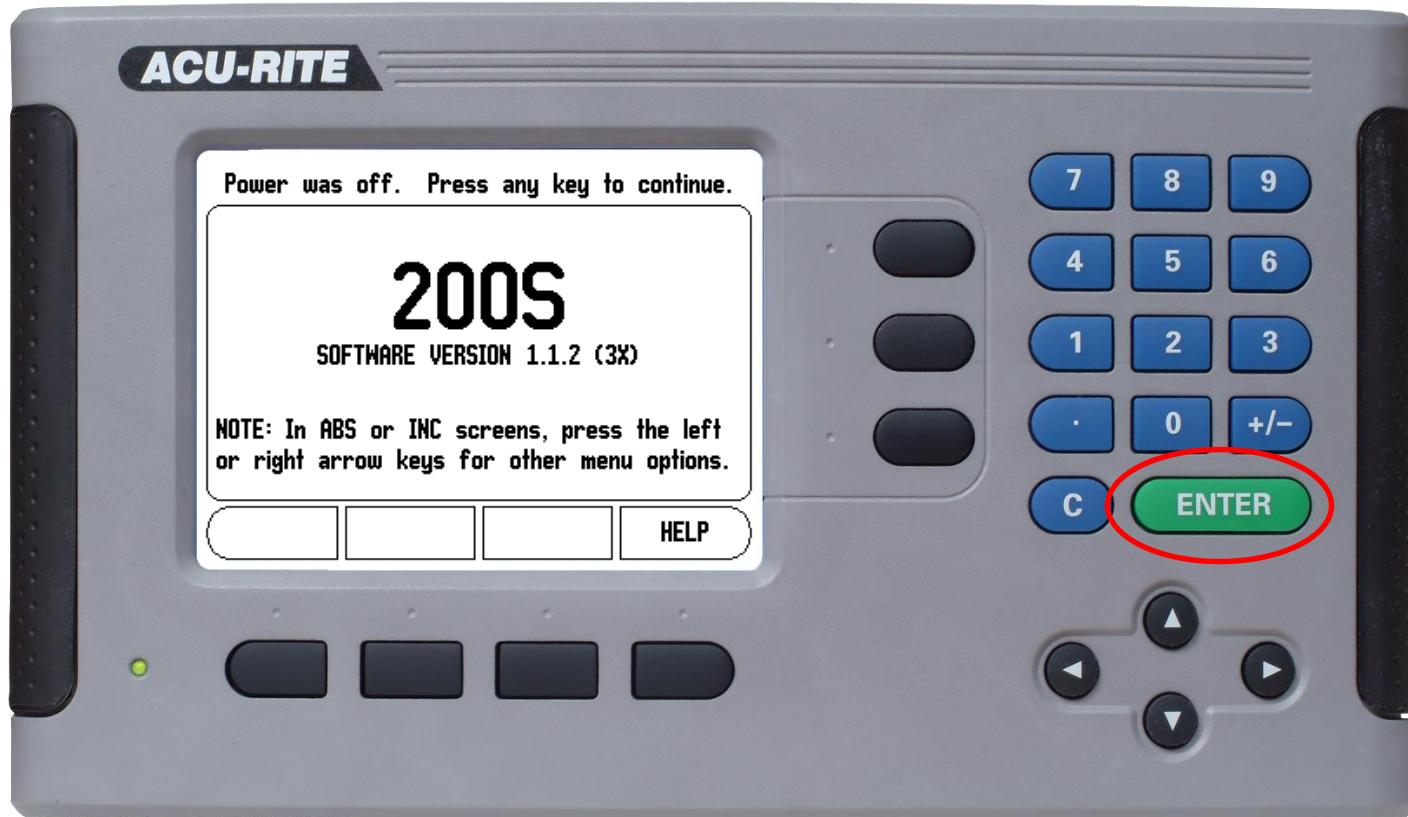


From the home screen, press the  key.

ACU-RITE® 200S: Changing Count Direction

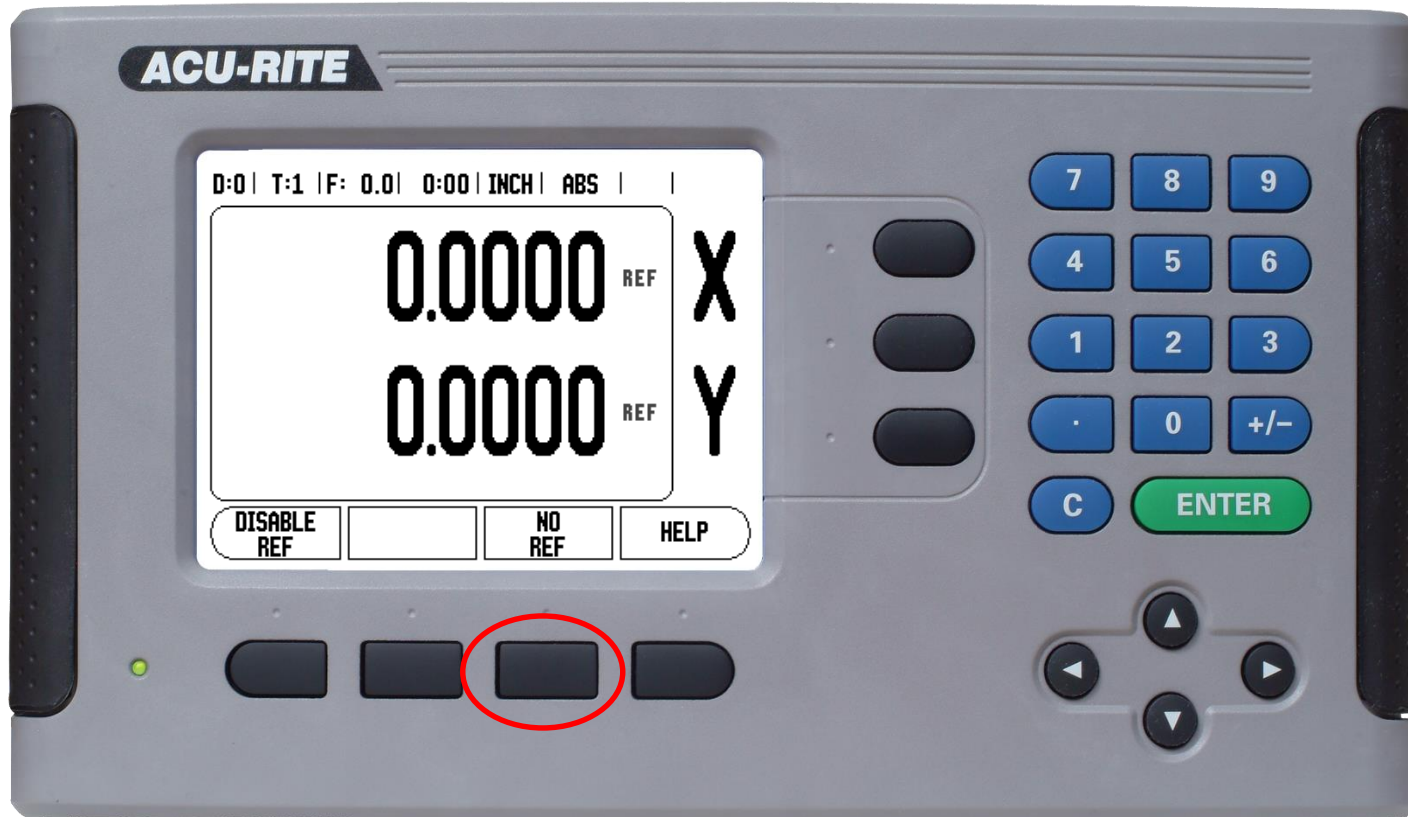


To change the count direction you don't need to reference the scale, so press the "NO REF" soft key.


ACU-RITE® 200S: *Changing Count Direction*

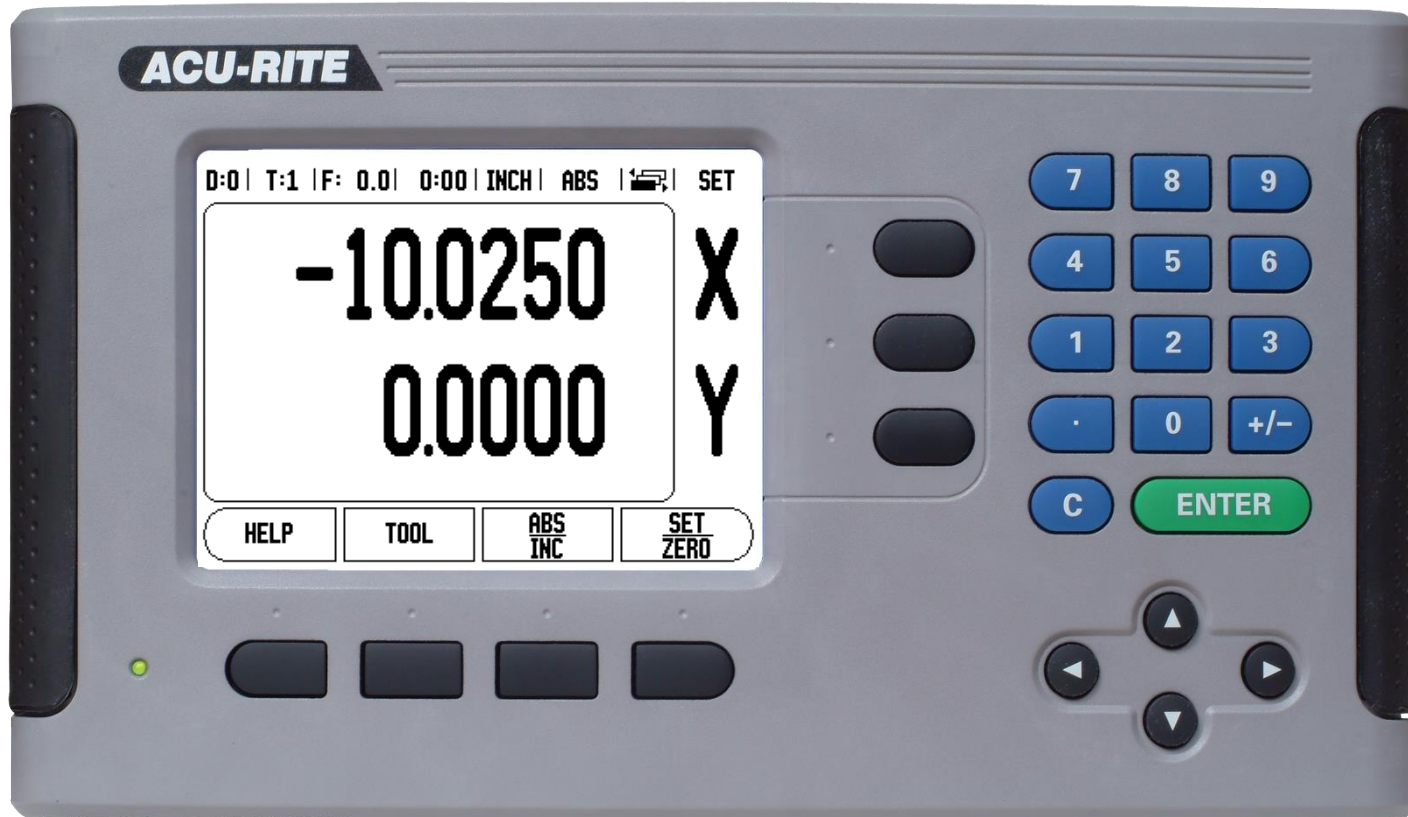


When the axis is moved in the positive direction, the DRO shows a negative number. Here's how to change it.

ACU-RITE® 200S: Changing Count Direction

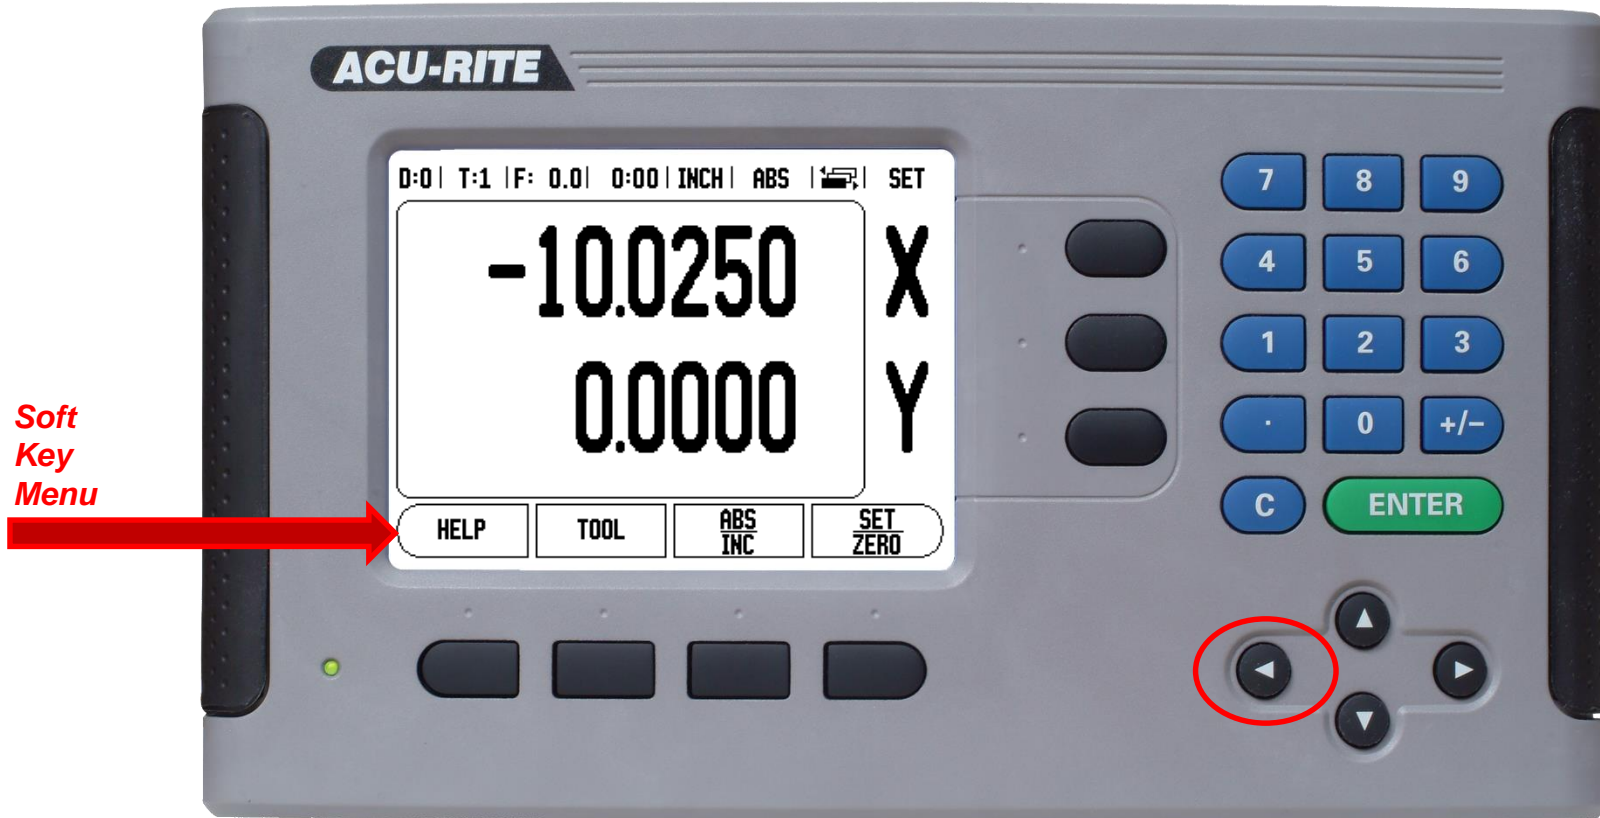


Press the  soft key until the first soft key menu space reads "SETUP."

ACU-RITE® 200S: Changing Count Direction

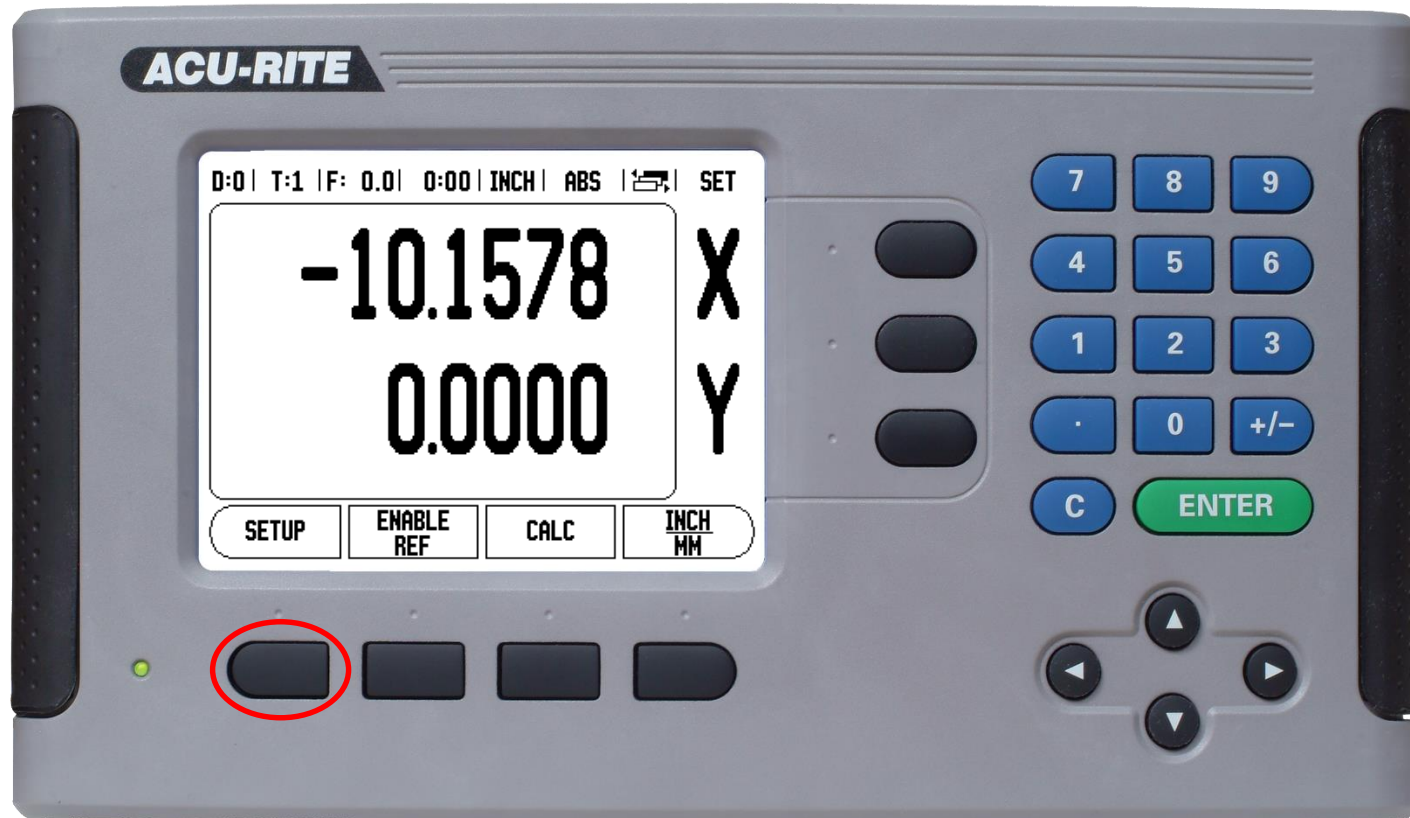


Press the “SETUP” soft key.

ACU-RITE® 200S: Changing Count Direction

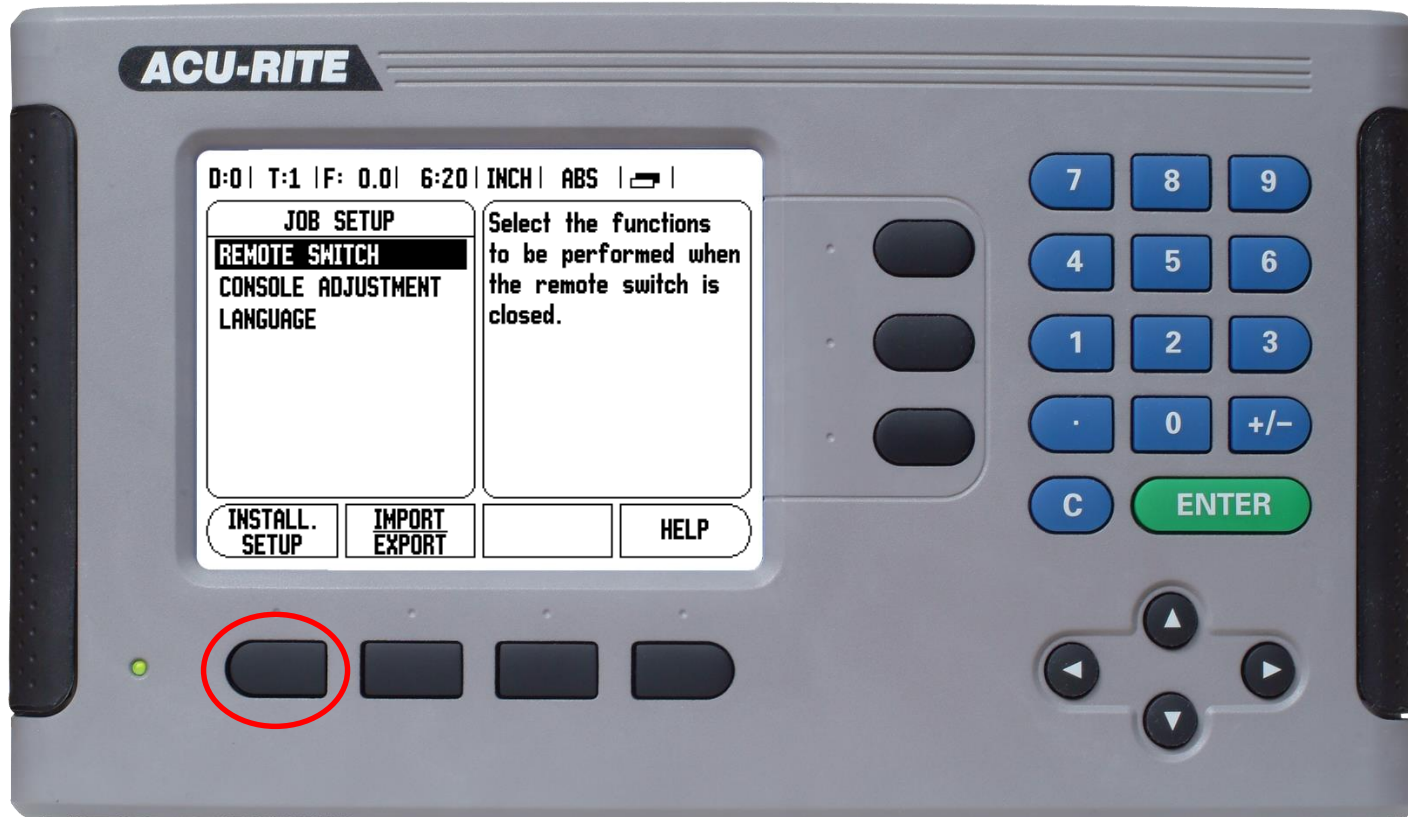

Press the “INSTALL SETUP” soft key.


ACU-RITE® 200S: Changing Count Direction

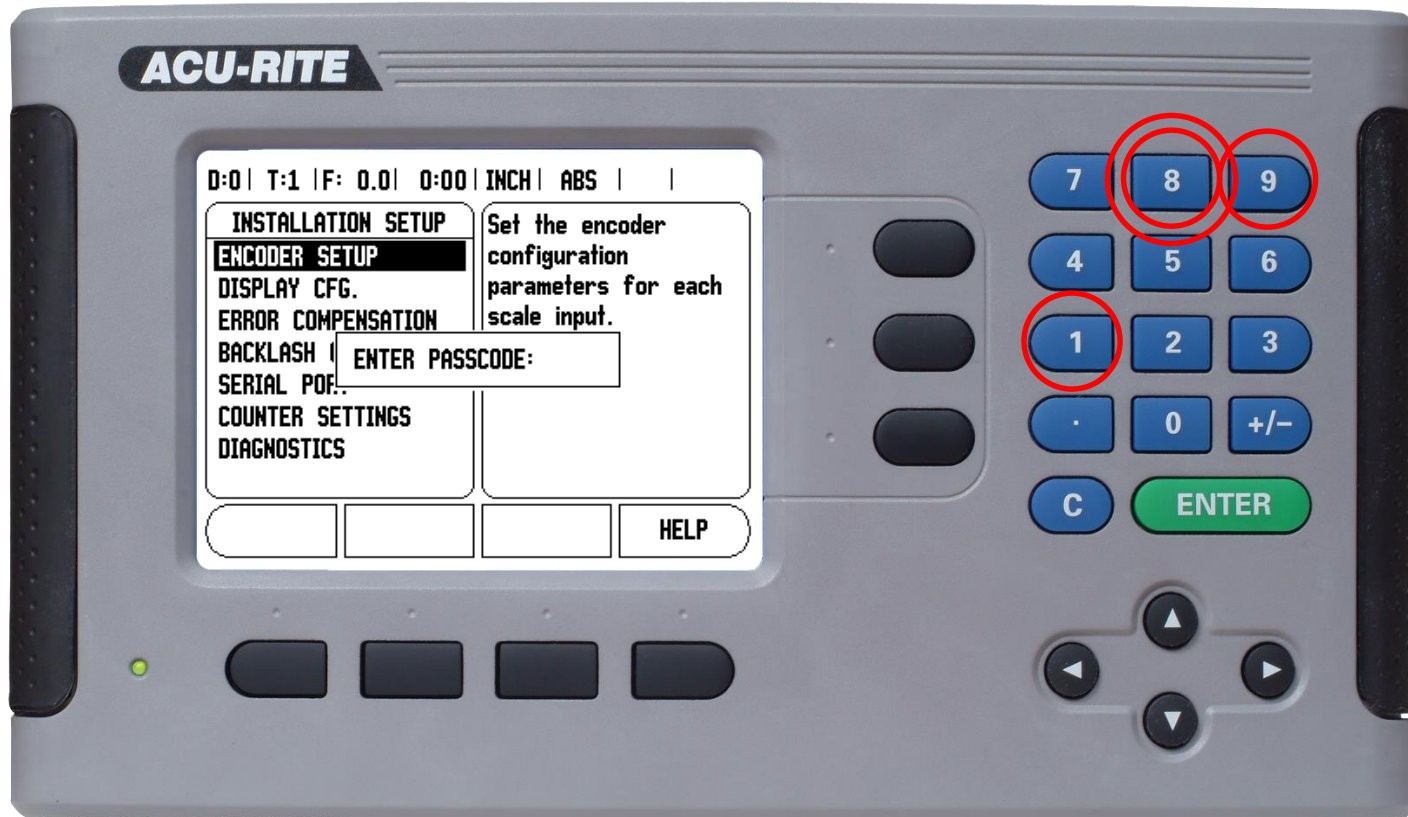

The DRO asks you for a “PASSCODE.”


Use the number soft keys and press: **8 8 9 1**

ACU-RITE® 200S: Changing Count Direction

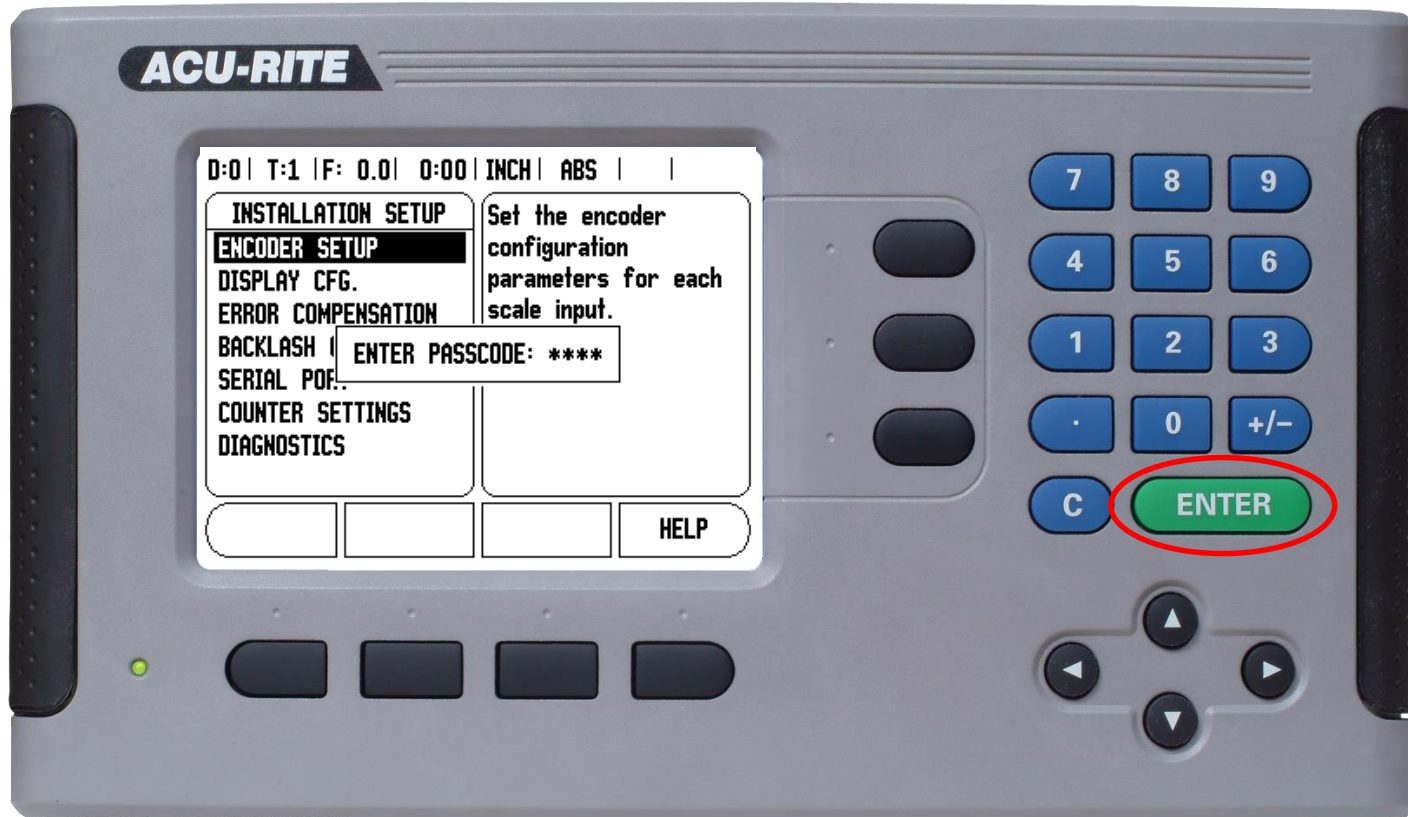


Press **ENTER**

ACU-RITE® 200S: Changing Count Direction

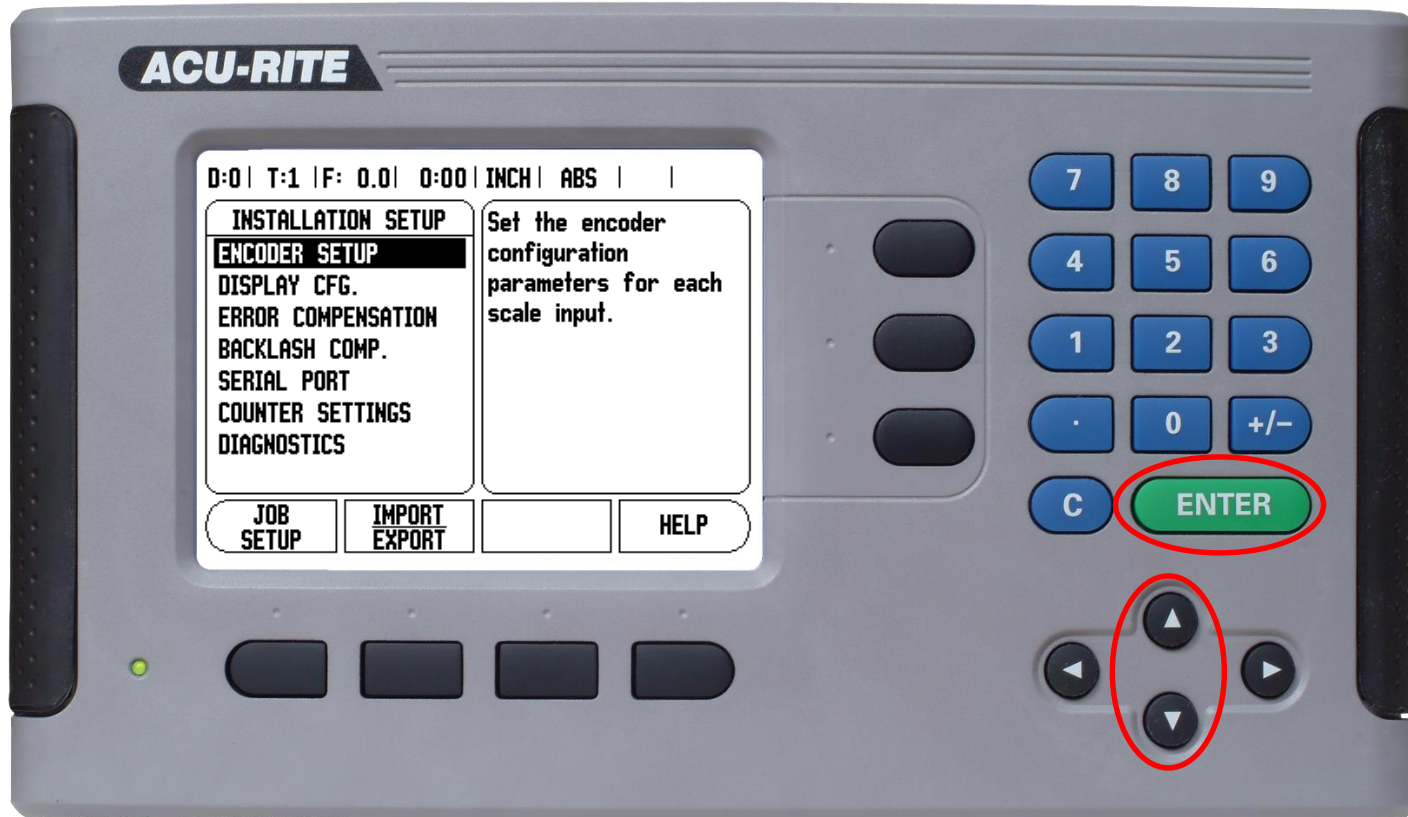

“ENCODER SETUP” should be highlighted. If it isn’t, use the ▲ or ▼ soft keys to highlight it, then press **ENTER**


ACU-RITE® 200S: Changing Count Direction

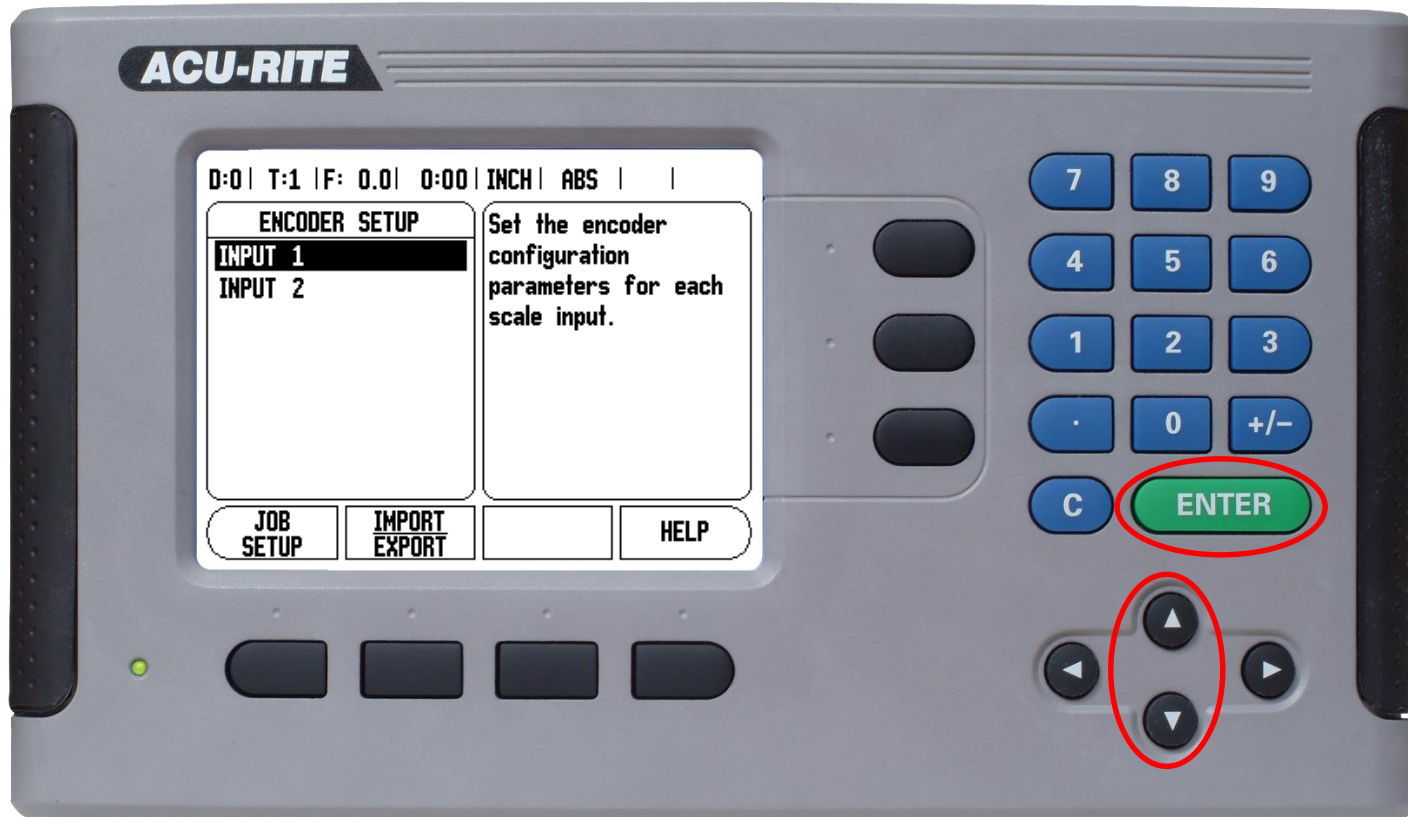

Use the ▲ or ▼ soft keys to highlight the input axis you want to change. Then press **ENTER**


ACU-RITE® 200S: Changing Count Direction

This icon shows you how many pages there are in this function and which page you are on.

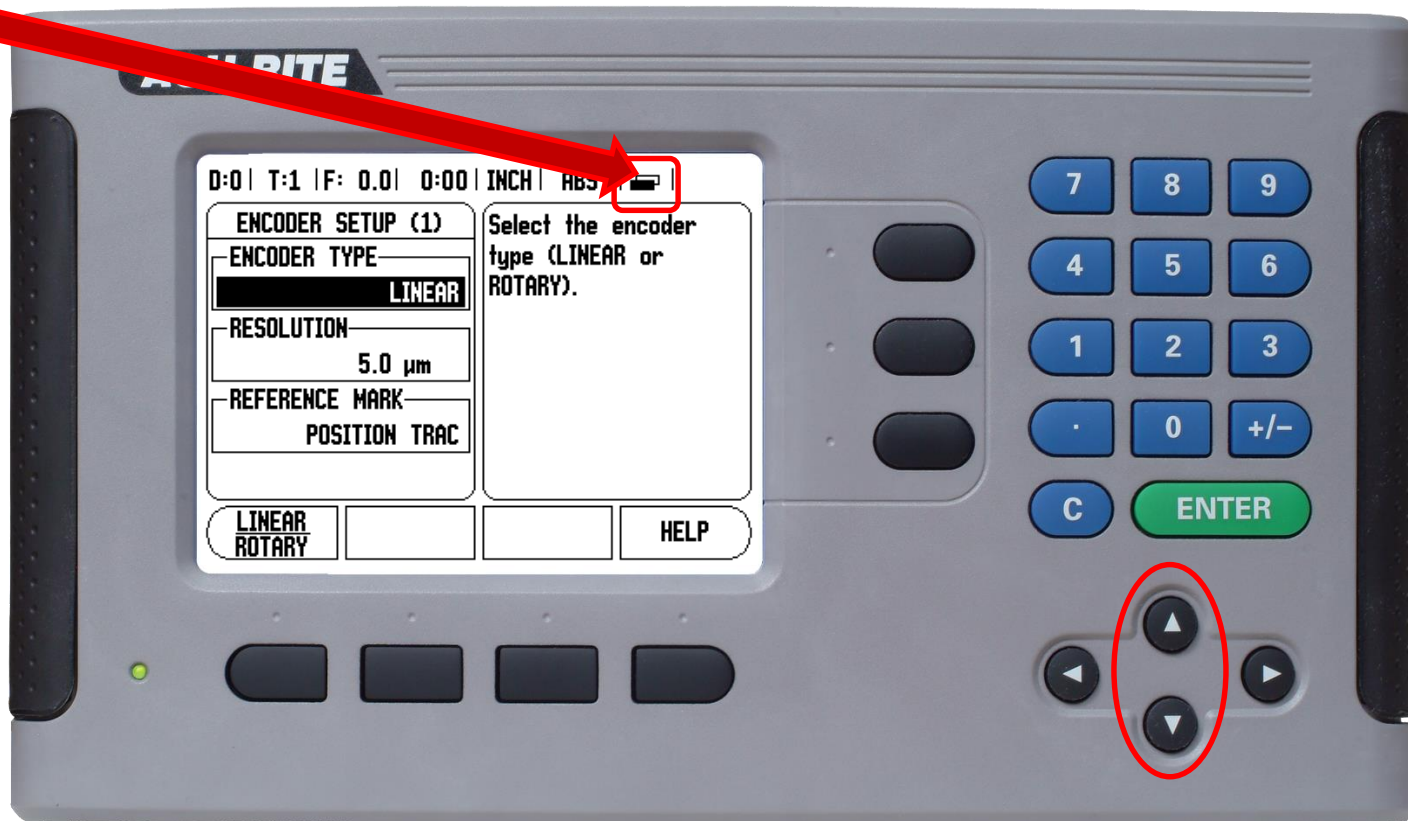


Use the ▲ or ▼ soft keys to highlight the “COUNT DIRECTION” box (shown on the next page).

ACU-RITE® 200S: Changing Count Direction

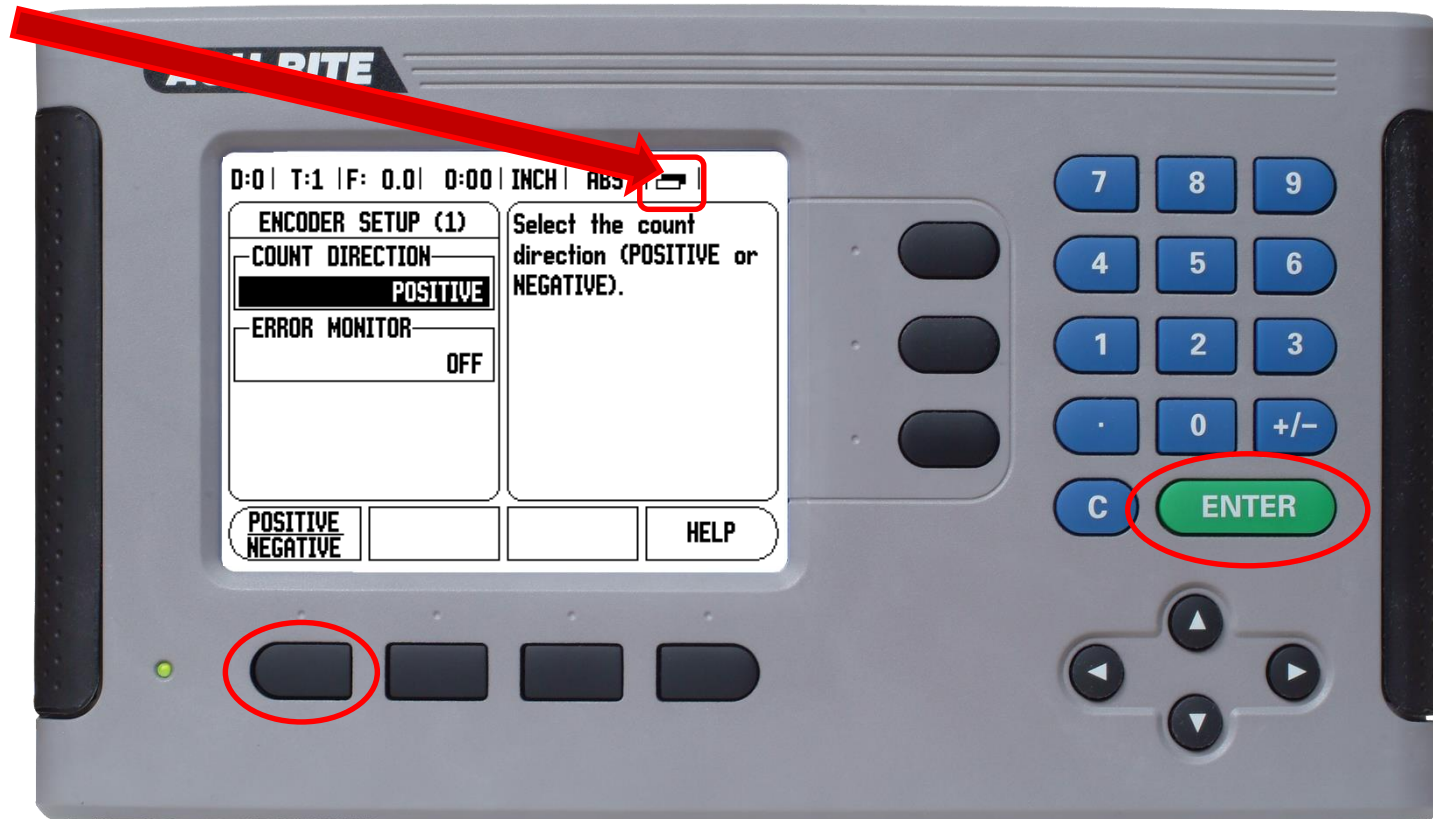


Press the “POSITIVE / NEGATIVE” soft key **once** to change the count direction, then press **ENTER** to save your change.

ACU-RITE® 200S: Changing Count Direction

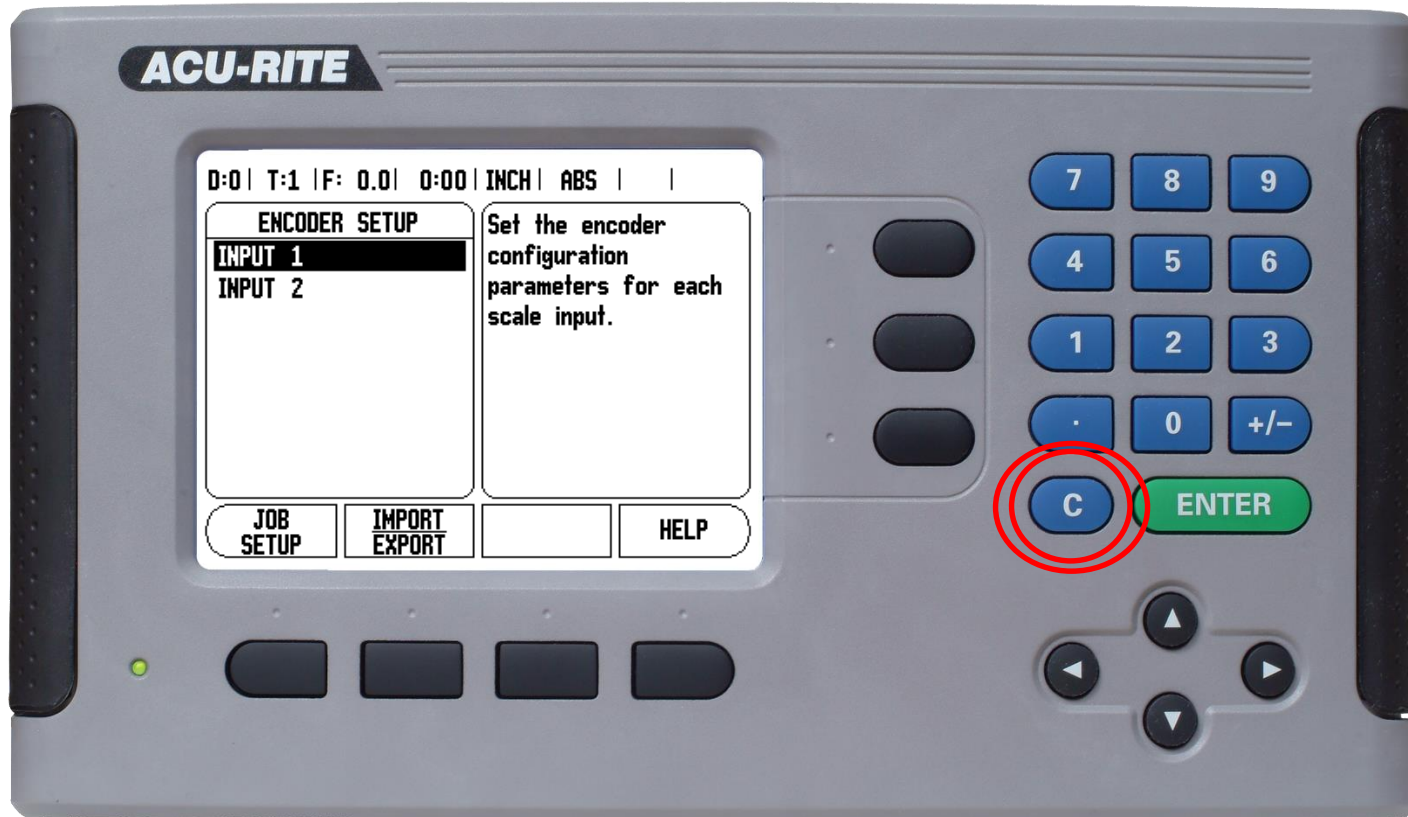

Press the **C** soft key as many times as needed to get back to the home screen.

ACU-RITE® 200S: *Changing Count Direction*

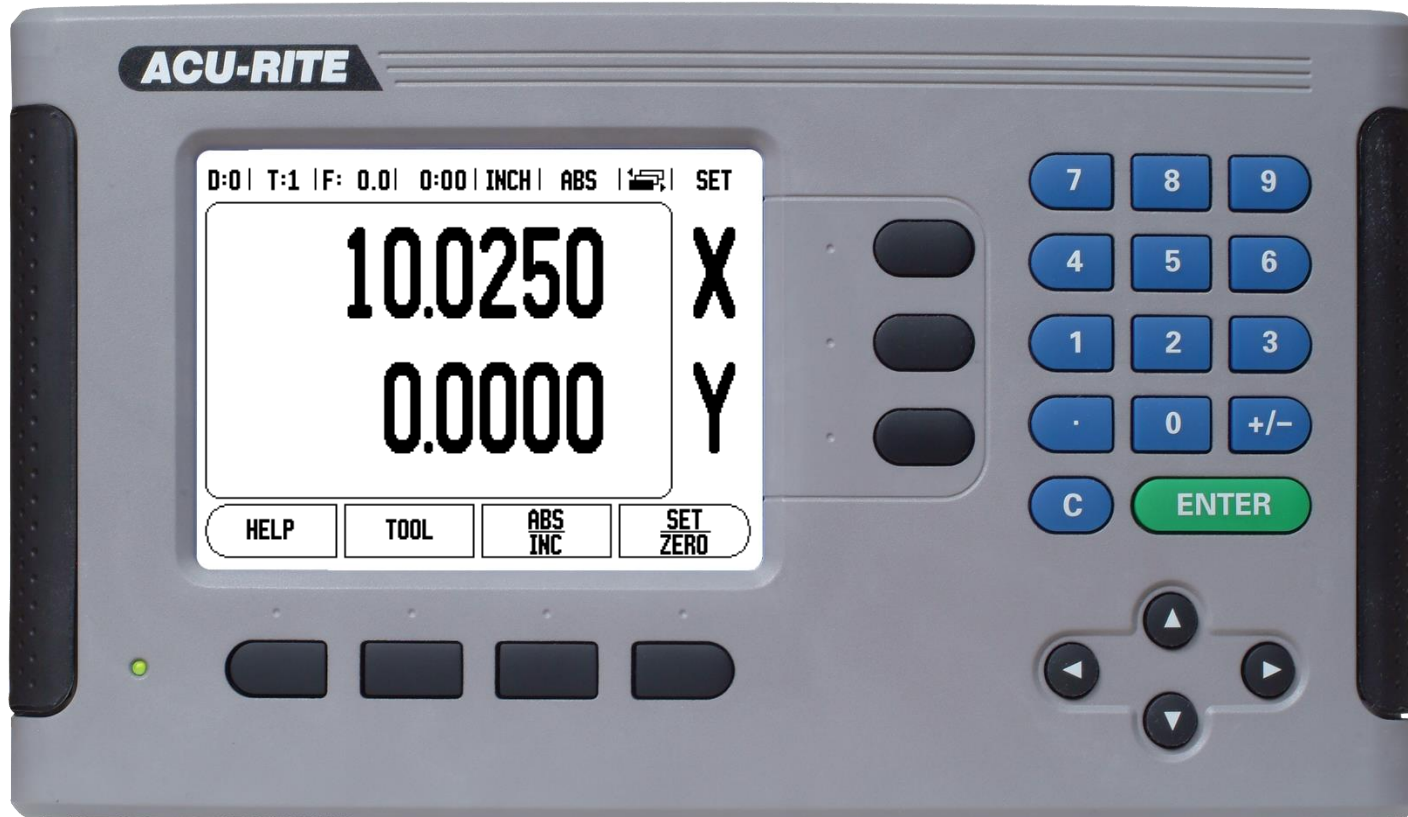

Your DRO should now display the correct count direction for your scale.